


# 5-Tier Metal Standing Shelving with Wood Panels

ASSEMBLY INSTRUCTIONS

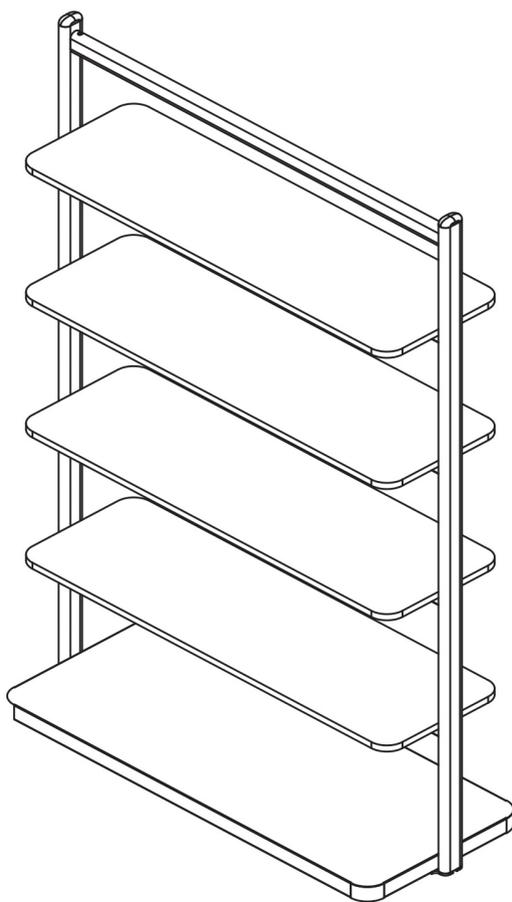

**FRIANT**

# Organized efficiency for modern offices.

Online  
Assembly  
Video



# Components

## Hardware


<b>A</b>		M6 10mm	<b>16 pcs</b>
<b>B</b>		M6 12mm	<b>32 pcs</b>
<b>C</b>		M6 12mm	<b>32 pcs</b>
<b>D</b>		M6 20mm	<b>4 pcs</b>
<b>E</b>		M6 30mm	<b>2 pcs</b>
<b>F</b>		M6 65mm	<b>8 pcs</b>

## Tools




Allen Key  
4 & 5mm **2 pcs**

## Main Parts

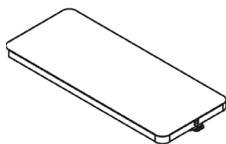


**G**  
Base Shelf  
**1 pc**

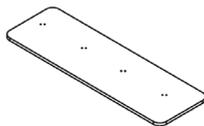

**H**  
Middle Shelf  
**4 pcs**



**I**  
Footing  
**4 pcs**

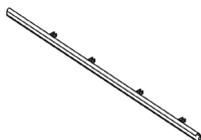

**J**  
Upright Post  
**2 pcs**




**K**  
Shelf Support Bar  
**4 pcs**



**L**  
Top Bar  
**1 pc**


# 1

Let's start with the base. Grab your Base Shelf (G), the four Footings (I) and all your (A) screws. Holding the Base Shelf (G) on its side, align the four holes on the footing with the plate on the underside of the Base Shelf. Insert (A) screws and tighten. Repeat for the three other Footings.

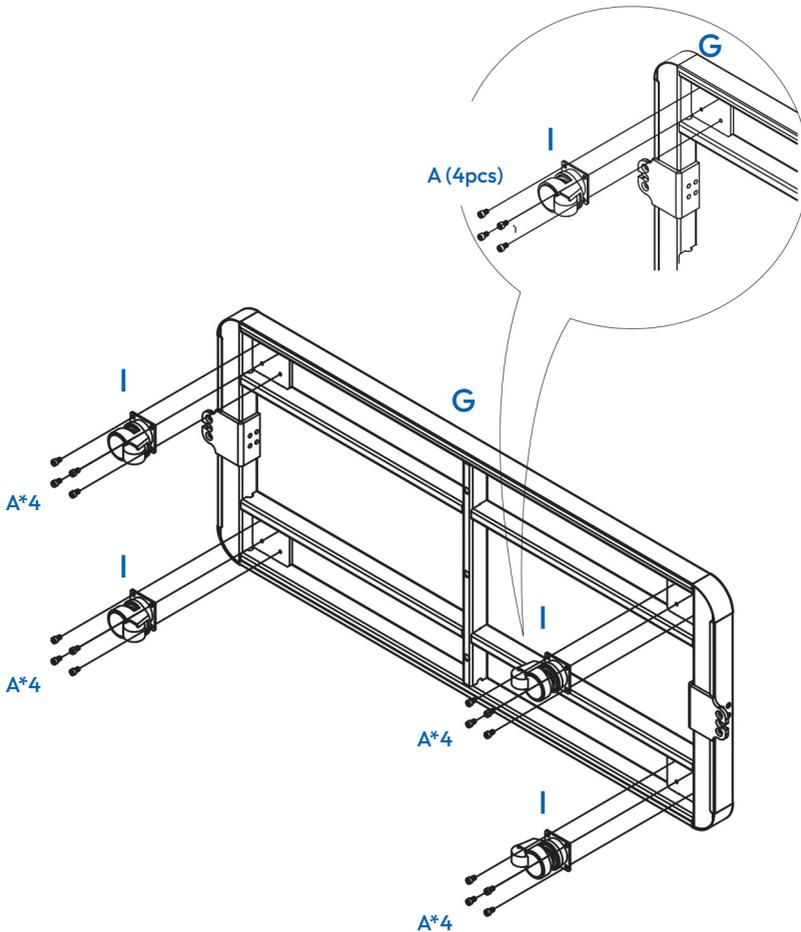


# 2

Now, let's build the frame. Grab the two Upright Posts (J) and lay them on their sides. Make sure the support points mirror each other, and that the lower end of each post has a larger gap between the support point and the end. Then, align the Top Support Bar (L) and the Shelf Support Bars (K) with both uprights and insert them together, pressing each end fully into place.

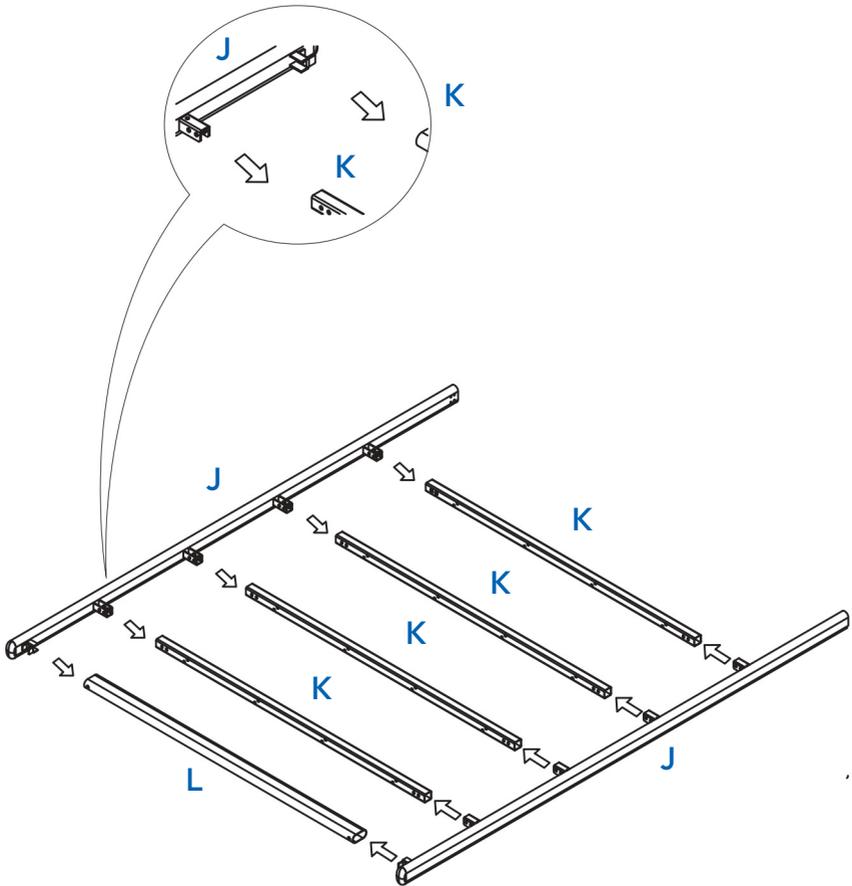


# 3

All bars should be seated evenly on the ground before fastening them together. For the Top Bar (L), insert (E) screws to secure—it only requires one screw on each side. For the Shelf Support Bars, use (C) screws on both the top and bottom of each side and tighten firmly. Each bar requires a total of eight screws.

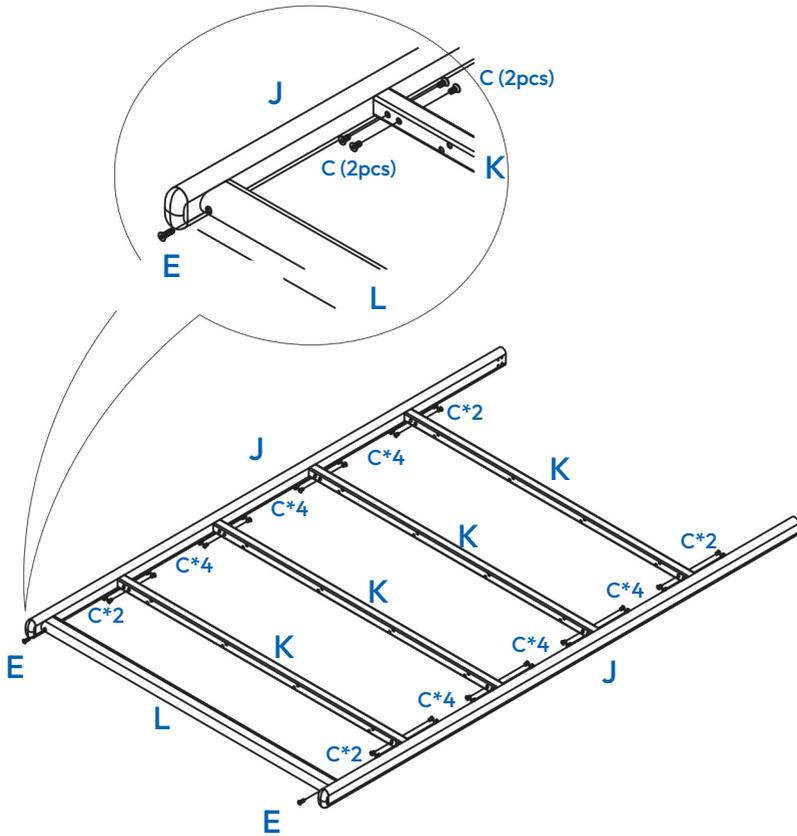


# 4

Bring the base back and align the shelf frame with upright plates on the base.

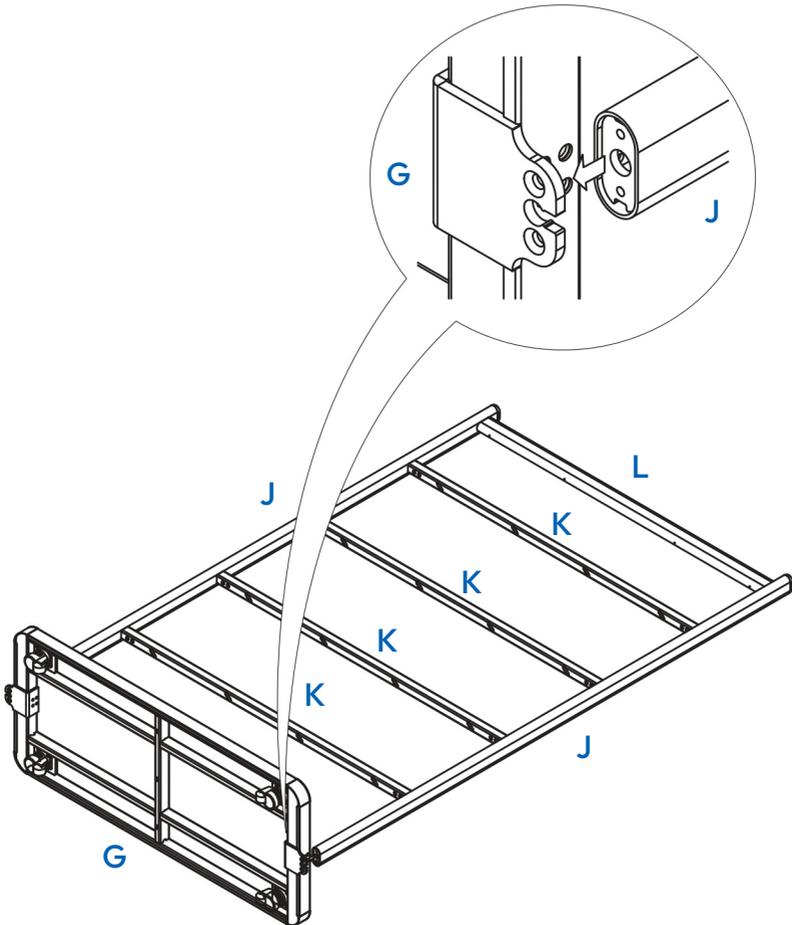



# 5

Once the uprights are aligned, insert two (D) screws into the bottom of the base plate. on the inner part of the base plate, insert and tighten four (F) screws. Repeat on the other side.

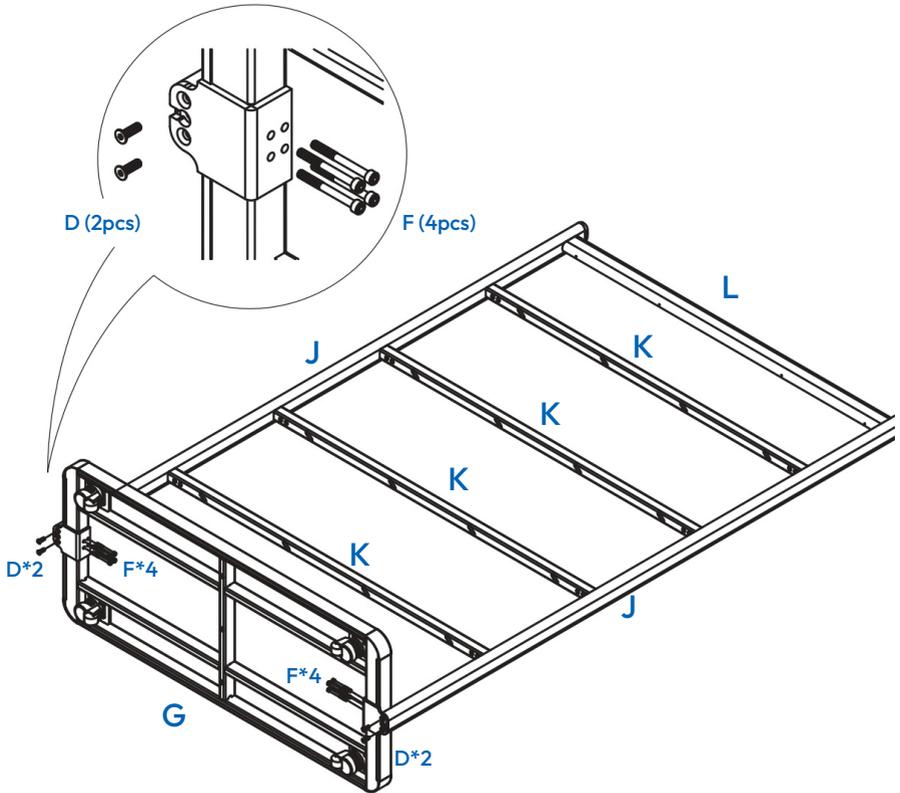


6

After securing the shelf frame and base, stand the whole piece upright.

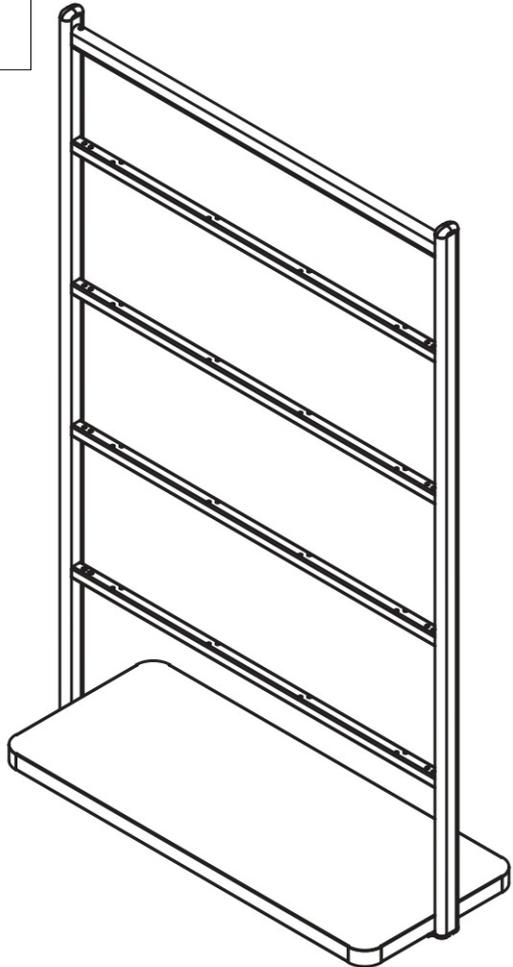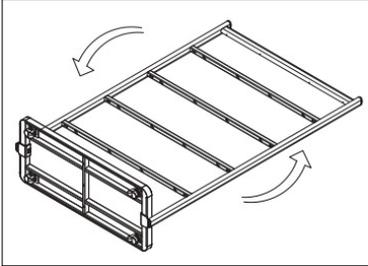

# 7

Now begin installing the Middle Shelves (H). Each shelf attaches to the Shelf Support bars with pairs of (B) screws. Place a shelf on top of the bar, align the holes from beneath the shelf, then insert and tighten screws. Repeat for a total of eight screws for each shelf.

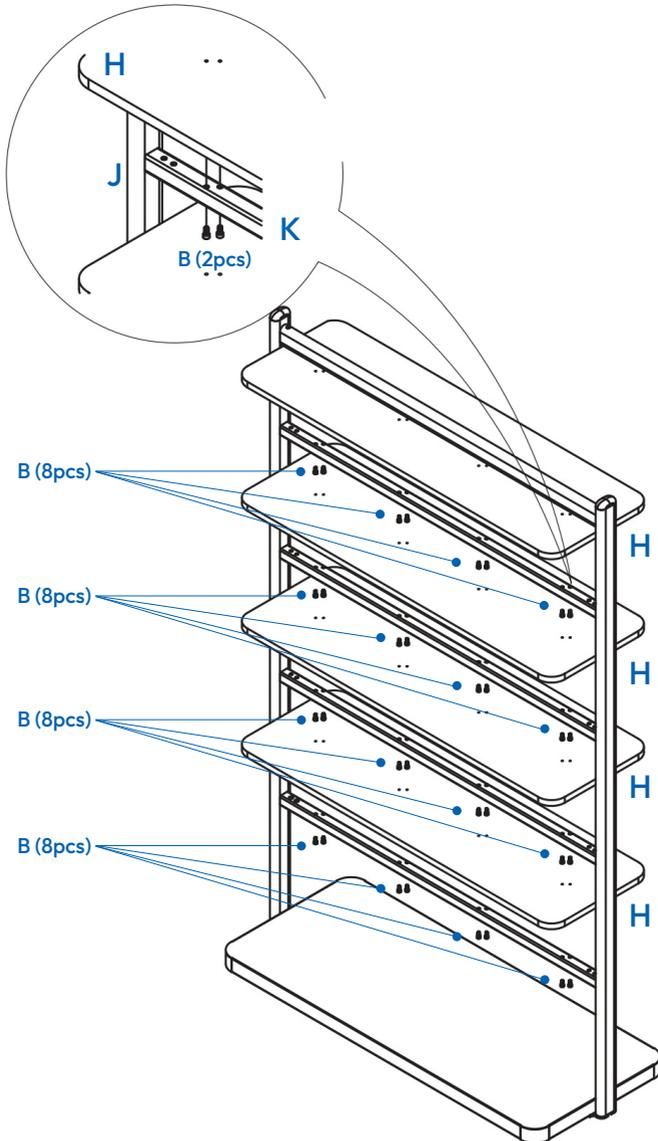

# All done!

Nice work—you've just elevated your workspace with Friant Plus.

Now organize, optimize, and enjoy the efficiency.

## Care Instruction

1. For oil stains on the particleboard shelves or powder-coated iron frame, gently wipe the surface with a soft cloth dampened with a mild detergent (such as warm soapy water).
2. Immediately dry with a clean, dry cloth after cleaning.
3. Avoid using strong chemical cleaners or abrasive tools to prevent surface damage.




# Friant has everything you need to build your entire office.

For more than 30 years, Friant has been creating high-quality office furniture to meet the needs of every workspace.

Made from the finest materials, our high-quality, durable, and stylish products are the building blocks of productivity.

Friant Plus now brings our craftsmanship online, offering exclusive access to products not found in typical retail stores.

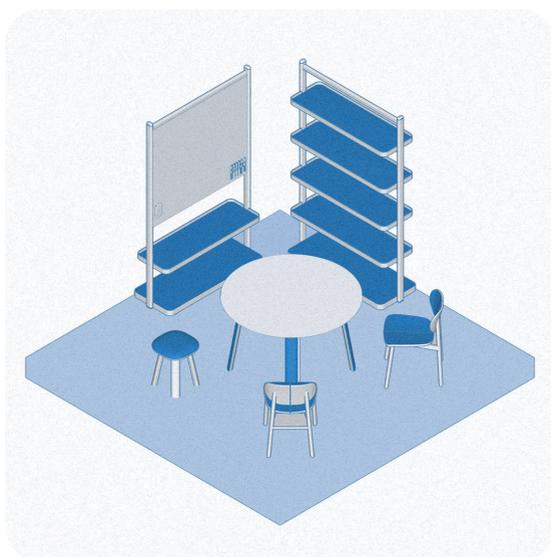

## Contact

Have questions, comments, or need support?

Email: [support@friantplus.com](mailto:support@friantplus.com)

Website: [www.friantplus.com](http://www.friantplus.com)