


Classic Wood Wide High Table

ASSEMBLY INSTRUCTIONS

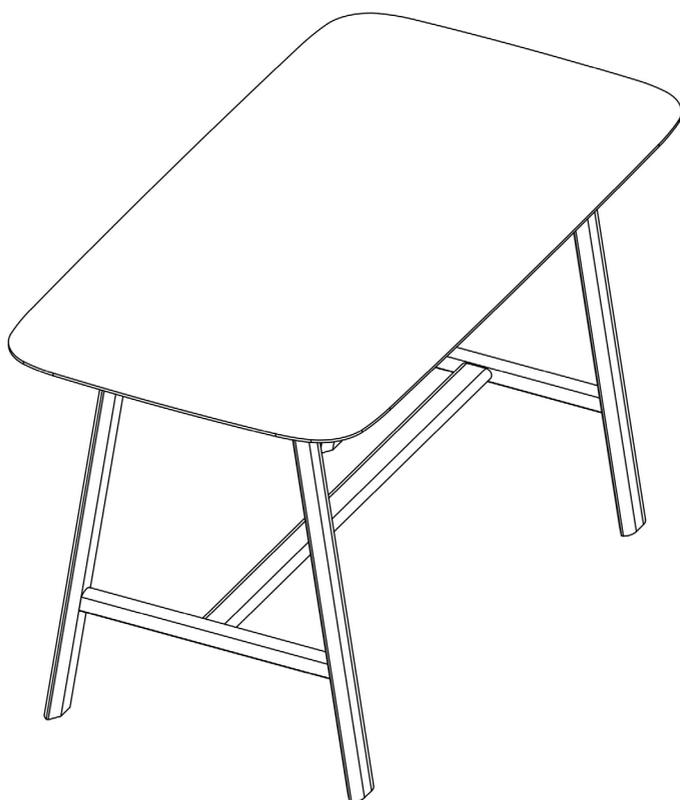

FRIANT

Natural warmth, elevated form.

Online
Assembly
Video



Components


Hardware

A		M8 25mm	10 pcs
B		M8 25mm	16 pcs
C		M8 70mm	8 pcs
D		M5 20mm	16 pcs
E		M5 40mm	8 pcs

Tools

	Allen Key 5mm	1 pc
	Phillips Head	1 pc

Main Parts

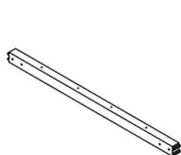

F
Beam
2 pcs



G
Leg Frame
2 pcs



H
Work Top
1 pc



I
Bracket Cover
4 pcs



J
Bracket Right
2 pcs




K
Bracket Left
2 pcs



L
Foot Rail
1 pc


1

Let's start with the frame. Grab the Beams (F), one Leg Frame (G), and the Foot Rail (L). Place the Leg Frame (G) on the ground. Align the protruding parts on one side of both Beams (F) and the Foot Rail (L) with the notches on the inner side of the Leg Frame (G). Insert the protruding parts downward until securely fitted.

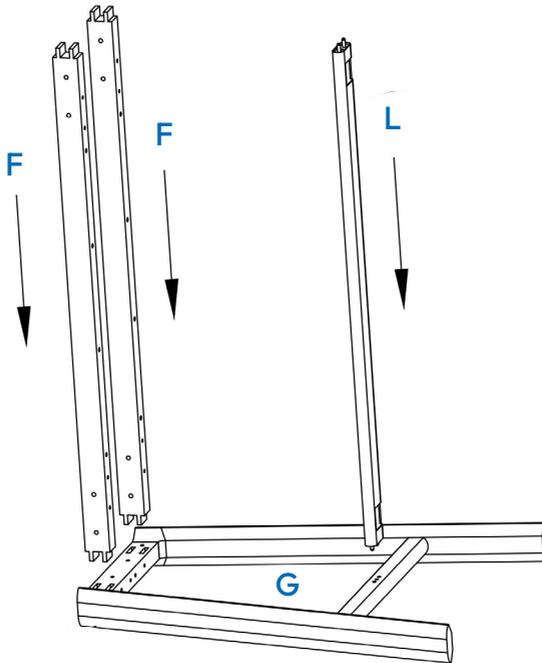


2

Lift the half-assembled frame and bring the other Leg Frame (G). Align and insert the protruding parts on the other side of the Beams (F) and Foot Rail (L) into the notches on the inner side of the Leg Frame (G).

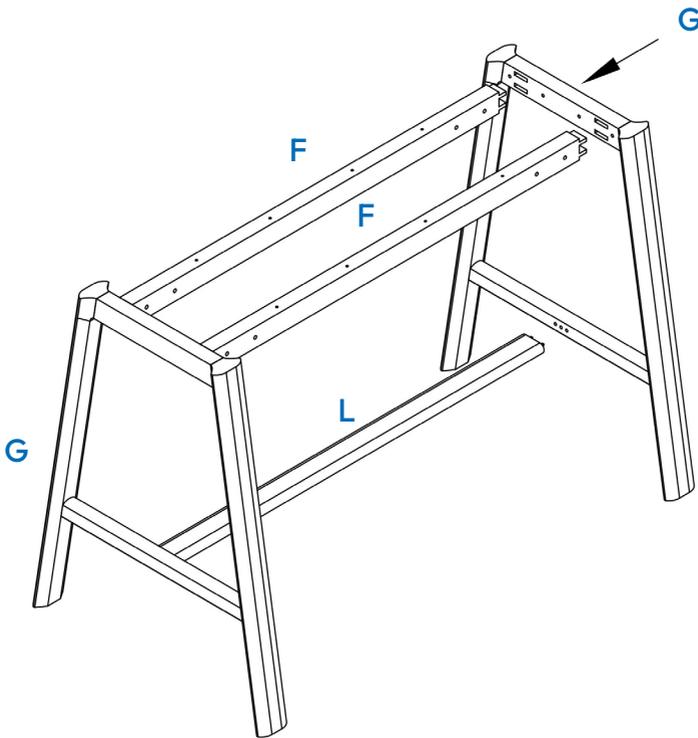



3

Take the Right and Left Brackets (J) and (K). Place the small flanges of all brackets on the outer side of the Beams (F). Insert and tighten pairs of (C) screws inside each of the small flanges to secure the brackets to the Beams (F).

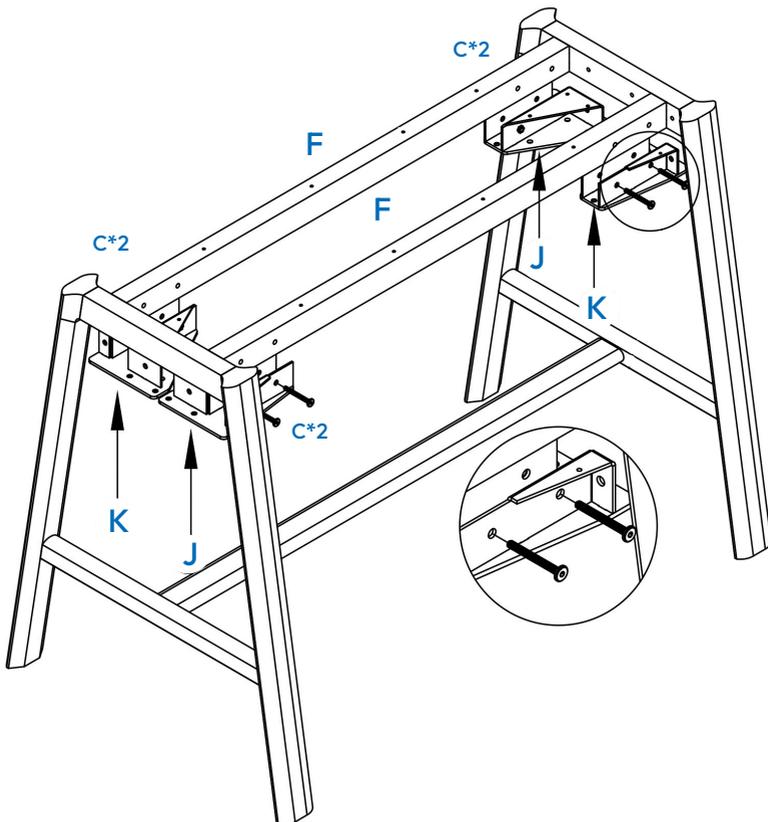



4

Then, insert and tighten (A) screws through the small and large flanges of the four Right and Left Brackets (J) and (K) to secure them to the Leg Frames (G). Each bracket requires two (A) screws.

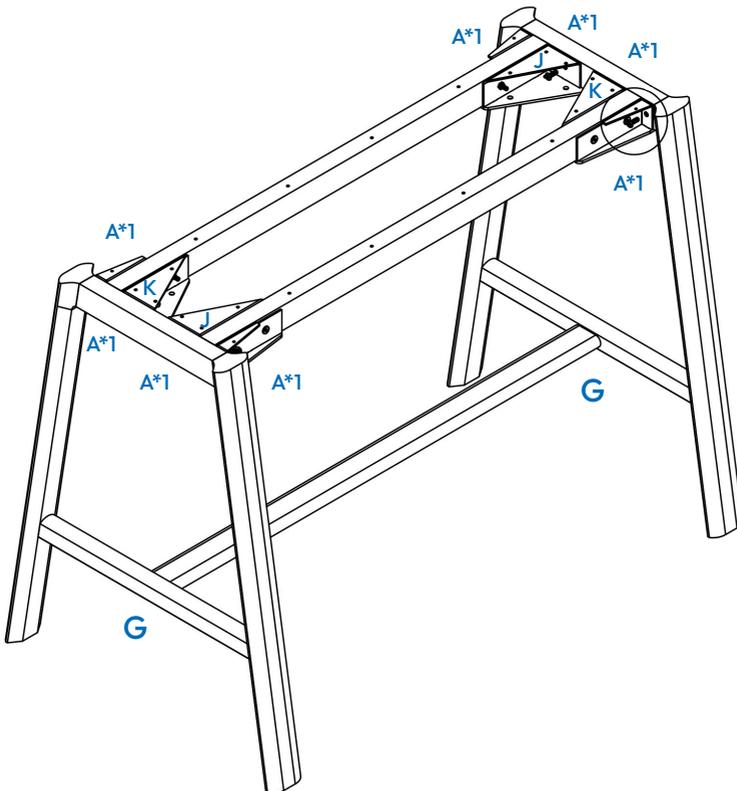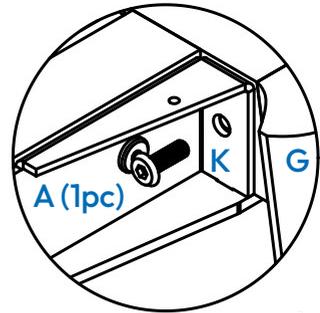



5

Grab all sixteen (B) screws and fasten them into the holes on the underside of each bracket. Each bracket requires four (B) screws.

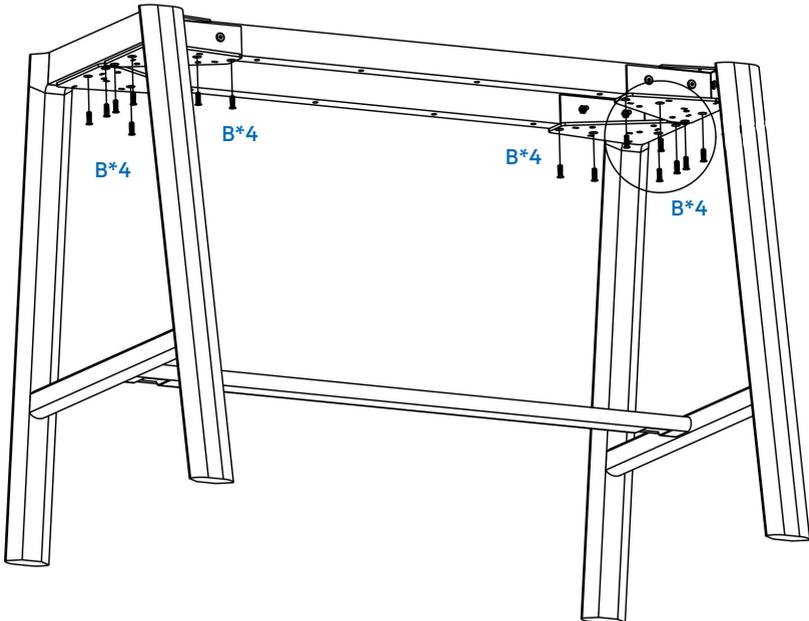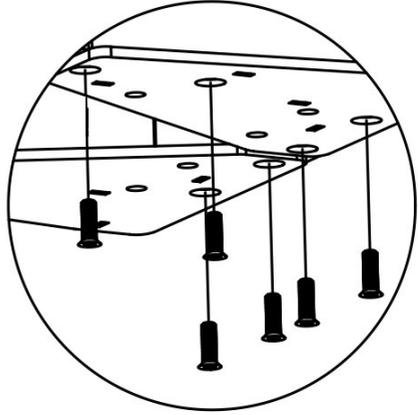


6

Remove the small covers of the Foot Rail (L).
Use (A) screws to secure the Foot Rail (L) to the
Leg Frames (G). Repeat for the other side.

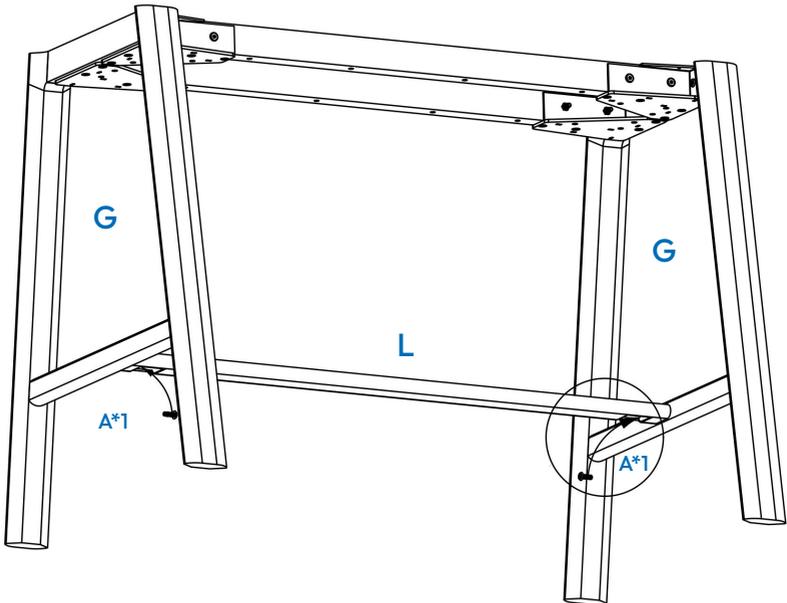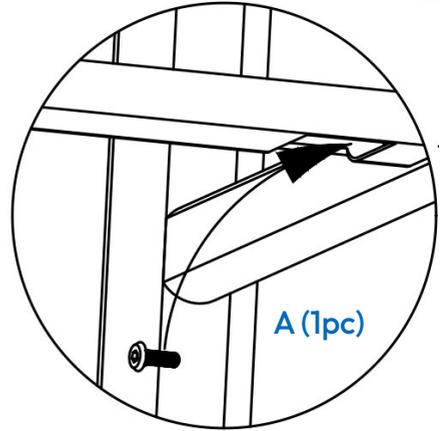



7

Now begin installing the Work Top (H). Place the Work Top (H) centered on the frame. To secure it to the Beams (F), insert and tighten (E) screws — each Beam (F) requires four (E) screws.

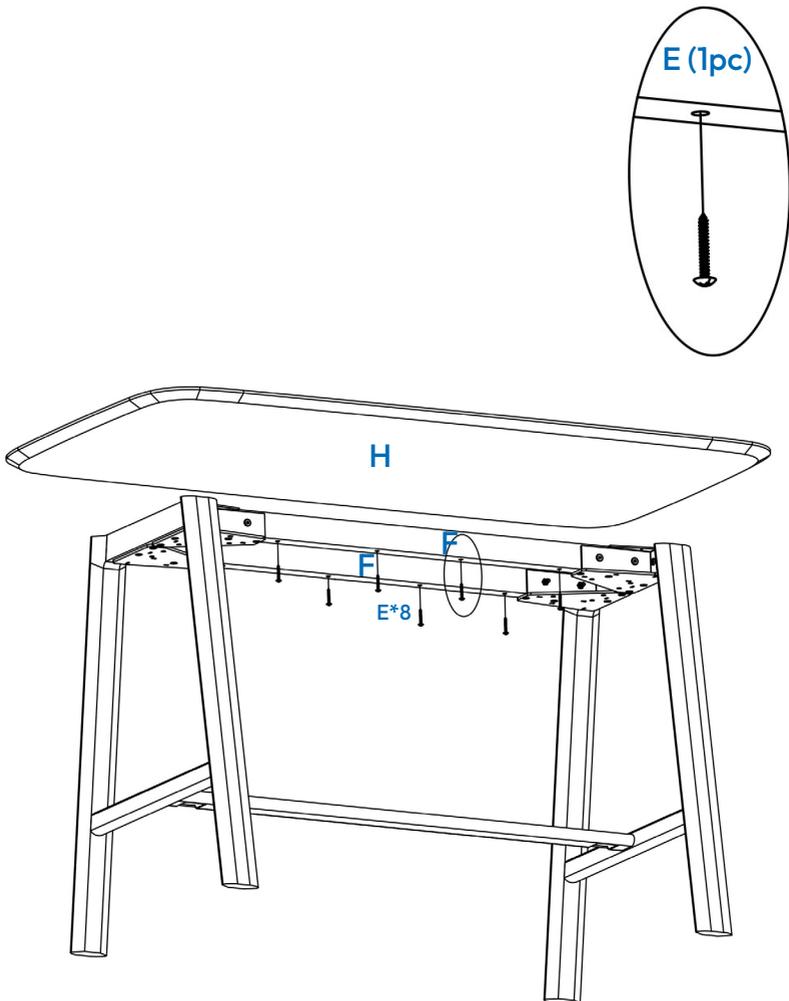


8

To secure the Work Top (H) to the Brackets (J) and (K), insert and tighten (D) screws — each bracket requires four (D) screws.

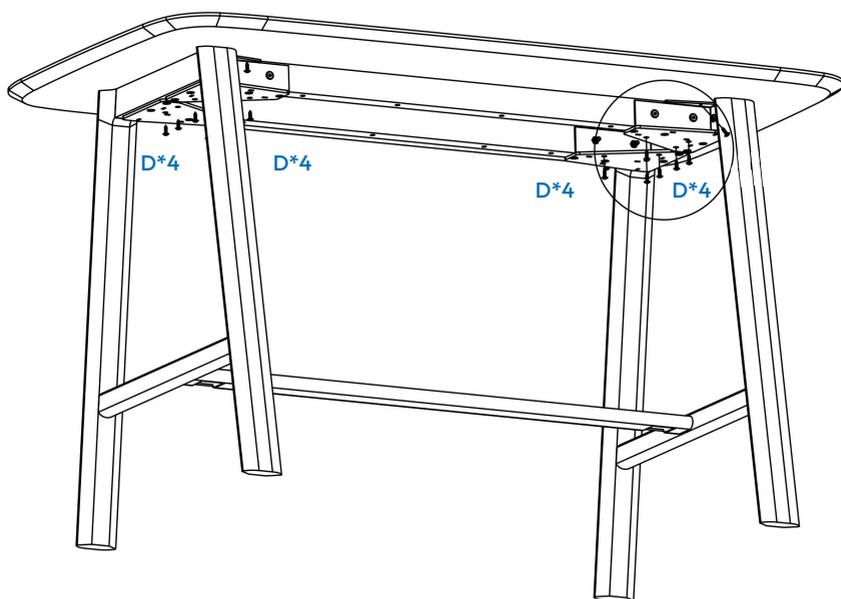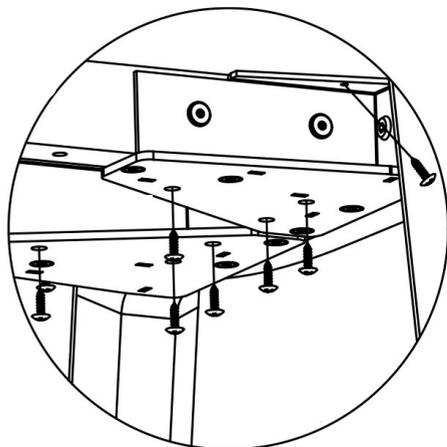

9

Clip on the four Bracket Covers (I) and put back the two small covers on the Foot Rail (L).

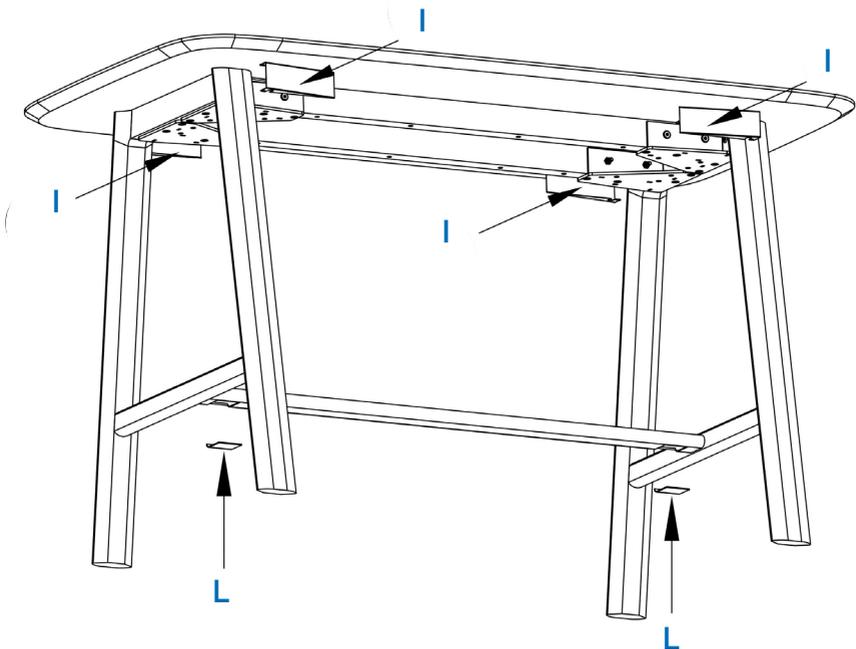

All done!

Nice work—you've just elevated your workspace with Friant Plus.

Now gather, create, and connect around your new table.

Care Instruction


1. Dust regularly with a soft cloth.
2. Avoid direct sunlight and excessive moisture.
3. Wipe spills immediately with a soft, dry cloth.

Friant has everything you need to build your entire office.

For more than 30 years, Friant has been creating high-quality office furniture to meet the needs of every workspace.

Made from the finest materials, our high-quality, durable, and stylish products are the building blocks of productivity.

Friant Plus now brings our craftsmanship online, offering exclusive access to products not found in typical retail stores.

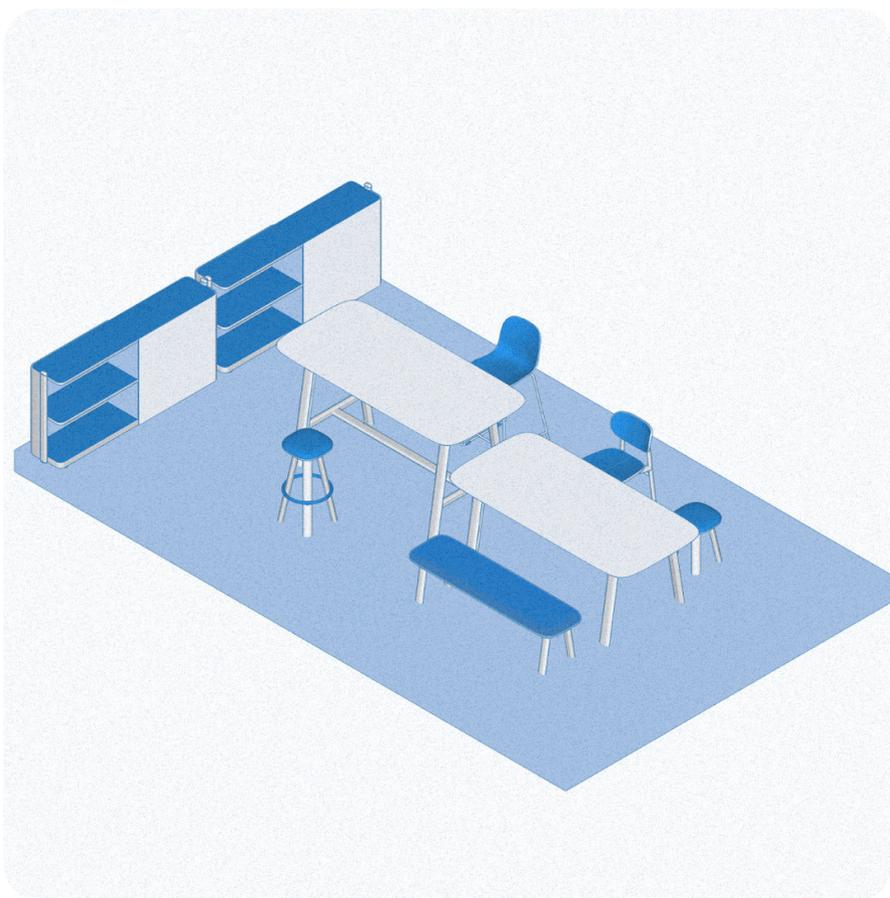



Contact

Have questions, comments, or need support?

Email: support@friantplus.com

Website: www.friantplus.com